
BILGE PUMP CONTROL PUMP-PRO 10

With memory for the reason to alarm

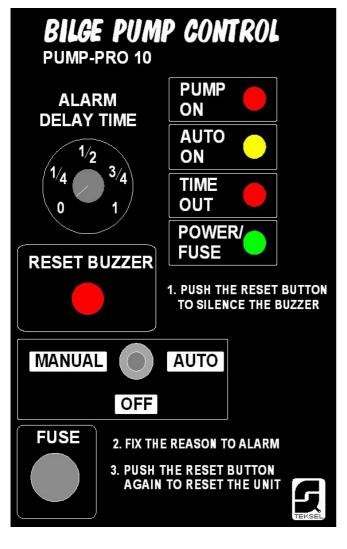

PUMP-PRO 10 max. 10AMP
PUMP-PRO10 IS MICROPROCESSOR
CONTROLLED

CONTROL OF THE PUMP "MANUAL, OFF, AUTO"

CONTROL OF OVERRIDING
THE PRESETTED "ALARM DELAY-TIME"

CONTROL/ ALARM OF THE FUSE

ALARM-BUZZER

REMOTE RESET

12-24VOLTS

PUMP-PRO 10 CONTROLS A BILGE PUMP WITH A SEPARATE OR BUILT-IN LEVEL SENSOR

PUMP-PRO 10 CAN BE PARALLEL-CONNECTED TO A EXISTING CONTROLPANEL

IF THE PUMP RUNNING TIME EXCEEDS THE PRESETTED ALARM TIME, (PRESETTABLE TO **0-10/20/30 min**.), IT WILL ACTIVATE AN ALARM

WHEN ALARM, THE BUZZER SOUNDS and the "LED'S" WILL FLASH AS FOLLOWS:

- 1) THE FUSE BLOWN: "POWER/FUSE" WERY FAST FLASH
- 2) AUTO ON & LEVEL ON: "AUTO ON + TIME OUT" FAST FLASH
- 3) MANUAL ON & LEVEL ON: "PUMP ON + TIME OUT" SLOW FLASH
- 4) MANU ON & LEVEL OFF: "PUMP ON + TIME OUT" SLOW FLASH
- 5) SWITCH OFF & LEVEL ON: "PUMP ON + AUTO ON + TIME OUT" SLOW FLASH
- 6) SWITCH OFF & LEVEL OFF: "POWER/FUSE" WERY SLOW FLASH

PRICE: 225,- € (incl. VAT) + delivery 7,- €

Ordering contact's here below

For Whole-/ Retail-sale, Manufactory's, ask for them price's for You.





FUNCTION

When Alarm:

To silence the buzzer, push the "RESET BUZZER" button

The LED's will continue to flash in, "MEMORY-STATE", until the reason to the alarm is fixed Push again the "RESET BUZZER" button to reset the unit


The **PUMP-PRO 10** unit monitors the status of the fuse, thus giving an alarm if blown The **PUMP-PRO 10** unit is powered itself, until the power connection *(J3)* is disconnected

With the switch "OFF" the PUMP-PRO 10 will send "TEST PULSES" to monitor the status of the level-switch, if active, giving an alarm

IMPORTANT: THESE TESTPULSES ARE SO FAST THAT YOU CAN'T READ-OUT THEM WITH A UNIVERSAL VOLT-MULTIMETER

Therefore cut the power to *PUMP-PRO 10 (J3)* when service / maintenance. (No harm done even not unpowering the **PUMP-PRO 10** or shortening the level- switch terminals)

CONNECTIONS

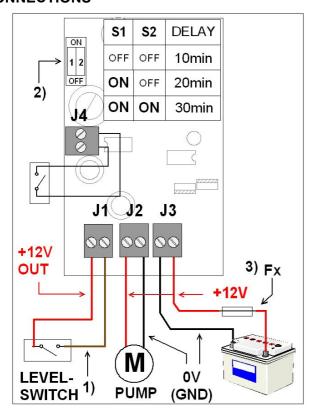

- 1) When using a built-in levelswitch, this leader does not exist
- 2) Selection of the delay-time limits
- **3)** The +12V supply should be protected with a external fuse with a minimum of the size of the pump-fuse (max. 10A)

With the PUMP-FUSE BLOWN the **PUMP-PRO 10** unit is still powered, (it is internally protected).

J4 Remote reset

We are developing a unit for them "SEATALK" and "NMEA" protocol's, carrying the status of the bilge pump & alarm's.

This Add-On unit can be added on to You'r existing unit

TECHNICAL INFO

VOLTAGE 12 - 24V

CURRENT for the Pump (via the relay) max. 10A/12V 5A/24V

CURRENT (PUMP-PRO 10 ONLY, not the pump):

With NO alarms: max. 110mA

With ALL alarm's "ON": max: 160mA

KAPTEENINTIE 8A3

Installation: Recessed mount The enclosure is rated to: **IP54**

TEKSEL





FI 10660 TAMMISAARI FINLAND